

Kit Contents		
Description	Part No	Pcs
Shock absorber	HO 734	1
C-spanner S46	00710-02	1
Sticker set "ÖHLINS"	10207-01	1
Owners manual road & track	07241-02	1

👁 Note!

Please note that there can be small differences between your product and the images in these instructions.

👁 Note!

Please note that during storage and transport, especially at high ambient temperature, some of the oil and grease used for assembly may leak and stain the packaging. This will not cause damage to the product, wipe off the excessive oil or grease with a cloth.

👁 Note!

Before you install this product, check the kit contents. If anything is missing, please contact an Öhlins dealer.

⚠ Warning!

Before you install this product, read the Öhlins Owner's manual. This product is an important part of the vehicle and the vehicle stability.

Shock Absorber for Honda X-ADV

HO 734

Mounting Instructions

MOUNTING INSTRUCTIONS

⚠ Warning!

We strongly recommend to let an Öhlins dealer install this product.

⚠ Warning!

If you work with a lifted vehicle, make sure that it is safely supported to prevent it from tipping over.

👁 Note!

When you work with this product, see the vehicle service manual for vehicle specific procedures and important data.

👁 Note!



Before you install this product clean the vehicle.

1

Put the motorcycle on a work stand so that the rear wheel barely touches the ground. Make sure the motorcycle is in a stable position.

2

Lift the seat by using the ignition key. Remove the plastic covers (1) (2) by loosening the screws (3) (4) (5) (6).

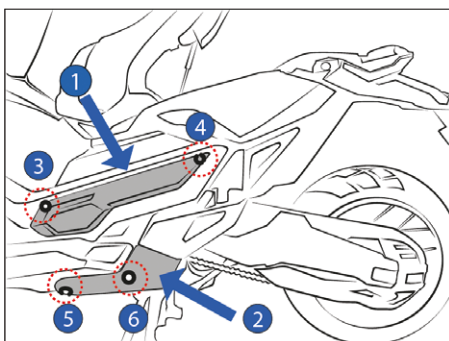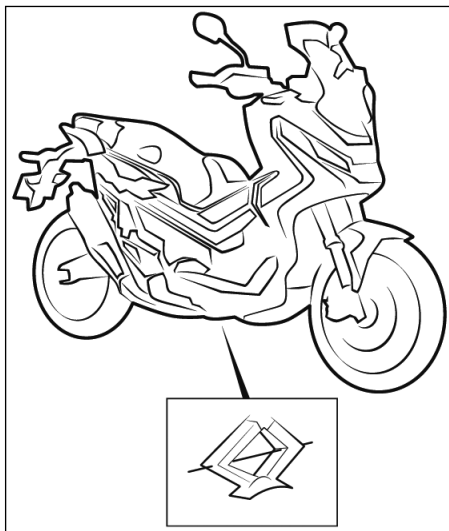

MOUNTING INSTRUCTIONS

3

Loosen the screws (1) (2) (3) (4) (5) (6) (7) in order to remove the parts (8) (9) as in diagram below.

4

Remove the rear mudguard by loosening 4 screws (1) (2) (3) (4) for ease to the upper shock absorber mounting point.

5





Uninstall the shock absorber as following:
Upper bolt : Recommended use the extension tool to loosen the bolt (5).

Lower bolt : Remove the bolts (6) (7) from the linkage and shock absorber.

6

Install the Öhlins shock absorber and tighten at a torque value as specified in the vehicle service manual.

Reverse all procedures as necessary.

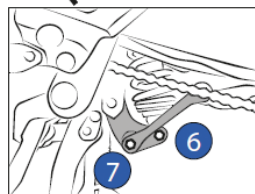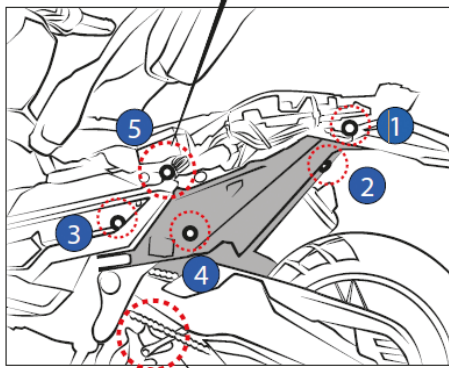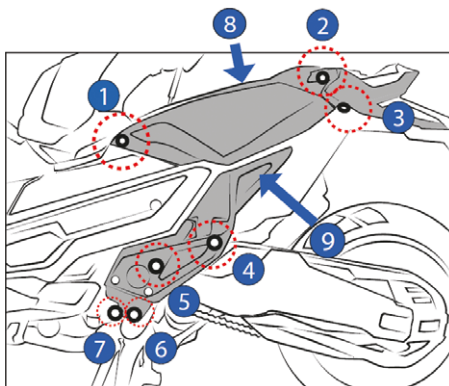


ADJUSTMENTS

⚠ Warning!

Before you ride/drive, always make sure that the setup is according to the recommended setup data. Read about adjustments and setting up in the Öhlins Owner's Manual before you make any adjustments. Contact an Öhlins dealer if you have any questions about setting up.

SETUP DATA

Length	312	mm
Stroke	58	mm
Rebound adjuster	16	clicks
Spring preload	11	mm
Spring Part no.	01095-54	
Free spring length	180	mm
Spring rate	140	N/mm

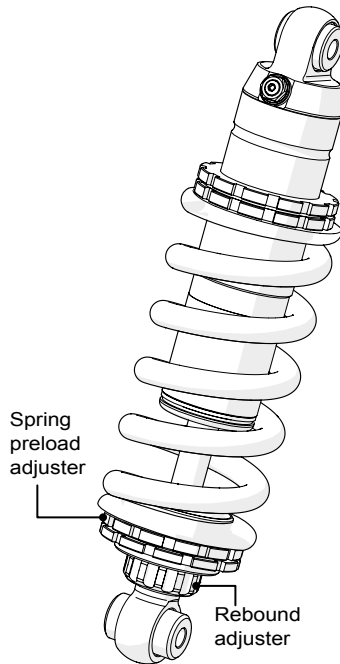

Öhlins products are subject to continuous improvement and development, therefore, although these instructions include the most up-to-date information available at the time of printing, minor updates may occur.

To find the latest information contact an Öhlins distributor. Please contact Öhlins if you have any questions regarding the contents in this document.

Part no. MI_H0734_0
Issued 2018-11-28

© Öhlins Racing AB. All rights reserved. Any reprinting or unauthorized use without the written permission of Öhlins Racing AB is prohibited.

Öhlins Racing AB
Box 722
S-194 27 Upplands Väsby, Sweden
Phone +46 8 590 025 00
fax +46 8 590 025 80



www.ohlins.com