


Adjustments

⚠ Warning!

Before riding, always make sure that the basic settings made by Öhlins are according to recommended Set-up Data. Read about adjustments and setting up in the Öhlins Owner's Manual before you make any adjustments. Contact an Öhlins dealer if you have any questions about setting up the shock absorber.

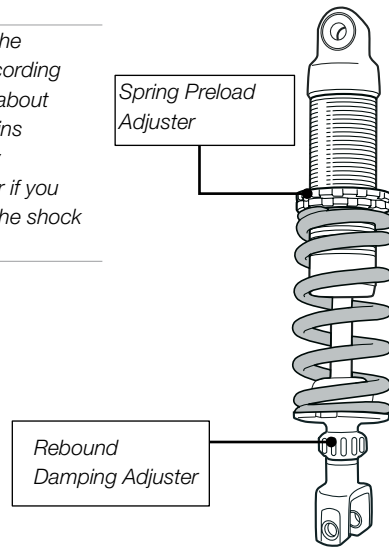

Before installing this product, check the contents of the kit. If anything is missing, please contact an Öhlins dealer.

Kit Contents

	Part No.	Pcs.
Shock Abs. S46DR1	KA 009	1
C-Spanner	00710-02	1
Öhlins Sticker	00192-01	2
Memo Notes Sticker	01180-01	1
Owner's Manual	07241-02	1

Please note that during storage and transportation, especially at high ambient temperature, some of the oil and grease used for assembling may leak and stain the packaging. This is in no way detrimental to the product, wipe off the excessive oil/grease with a cloth.

⚠ Warning!

Before installing this product, read the Öhlins Owner's Manual. The shock absorber is an important part of your vehicle and will affect the stability.

Set-up Data

Recommended set-up

		Shock	
Rebound	12 clicks	absorber data	
Spring Preload	10 mm	Length	332 mm
		Stroke	63
Spring		Free Sag and Ride Height	
Part No.	Rate	R1 - R2 =	12 mm
01096-31	95 N/mm	R1 - R3 =	30 mm
Free length	190mm		

Öhlins products are subject to continuous improvement and development, therefore, although these instructions include the most up-to-date information available at the time of printing, minor updates may occur.

To find the latest information contact your Öhlins distributor. Please consult your Öhlins dealer if you have any questions regarding the contents in this document.

Part no. KA009_0
Issued 2010-02-23



© Öhlins Racing AB. All rights reserved. Any reprinting or unauthorized use without the written permission of Öhlins Racing AB is prohibited.

Öhlins Racing AB
Box 722
S-194 27 Upplands Väsby, Sweden
Phone +46 8 590 025 00
fax +46 8 590 025 80



www.ohlins.com

Shock Absorber for Kawasaki Z 750

KA 009

Mounting Instructions



Warning!

It is advisable to have an Öhlins dealer install the shock absorber.

When installing, consult your Vehicle Service Manual.

1

Put the motorcycle on a workstand so that the rear wheel barely touches the ground.

Warning!

Make sure the vehicle is securely supported so that it will not tip.

2

Loosen the pull rods of the suspension linkage at the swing arm.

3

Remove the original shock absorber.
Consult your Vehicle Service Manual.

Note!

Before installing the Öhlins shock absorber clean the vehicle thoroughly.

4

Install the Öhlins shock absorber in the same way as the original unit. Do not tighten yet.

Note!

Lower the motorcycle so that the shock absorber is slightly compressed, before tightening the screws.

5

Tighten the upper and lower attachment screw. Tighten the pull rods at the swing arm.

6

Make sure that all removed parts are reinstalled in the same way as they were before the installation of the Öhlins Shock Absorber.

Caution!

Make sure that all screws are tightened to the correct torque and that nothing fouls or restricts movement of the shock absorber when the suspension is fully compressed or extended.